


Positioning of the vehicle detector on the pole

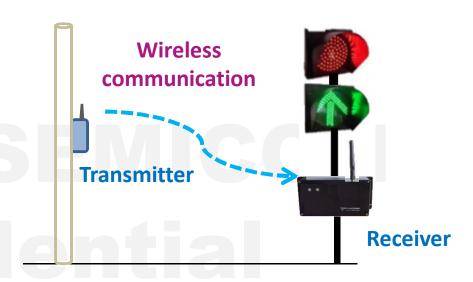

Vehicle detector sending signal to the traffic light control receiver

#### Rules to turn ON signal lights:

- 1 RED light turns ON: (automatically GREEN turns OFF)
  - When vehicle is detected by the hopper sensor
  - Manual remote controller (make sure the sensor transmitters are OFF)
- 2 GREEN light turns On: (automatically RED turns OFF)
  - Default
  - When vehicle has moved out of Bay exit (detected by EXIT sensor)
  - Manual remote controller (make sure the sensor transmitters are OFF)